



The mimio Wireless unit



The mimio Pad comes with two parts, the mimio Pad and the mimio Pad USB Adapter. These two parts are setup to work exclusively together at the factory. However, up to 40 mimio Pads can be paired with the same mimio USB adapter.

Pairing the mimio Pad and USB Adapter

If a mimio Pad becomes unpaired for any reason, such as replacing your the mimio Pad USB Adapter you can manually re-pair any mimio Pad with the USB Adapter.

The pairing process is described below:

1. Power on the mimio Pad.
2. Plug in the mimio Pad USB Adapter into an USB port on your computer.
3. Press and hold the red Learning Button on the back of the mimio Pad for 5 seconds or until the number section on the LCD on the front of the pad starts to flash. This initiates the paring process.
4. Quickly, press and hold the recessed Learn Button on the mimio Pad USB Adapter.
5. The number section on LCD on the mimio Pad must be

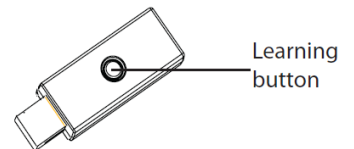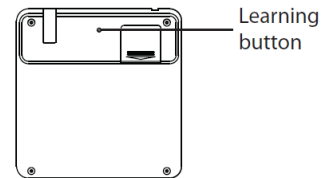

flashing at the same time when the learning button on the mimio USB Receiver is pressed for the pairing process to be successful.

6. Once the USB Adapter and the Wireless Module are connected, the mimio Pad LCD will show the number assigned to the additional Pad.
7. If only one mimio Pad and mimio Pad USB Adapter are present but unpaired, this process can be used to pair them.

Additional notes:

- You can only pair 40 mimio Pads to the same mimio Pad USB Adapter
- Bluetooth and/or 802.11x is neither required nor supported